

# DN-2000F MKII Preset Setting Quick Guide

ONLY WHEN "NO DISC", "CUE" OR "PAUSE", YOU CAN CHANGE PRESET DATA.

EACH OF CD1 AND CD2 CAN BE SET INDEPENDENTLY.

	BUTTONS	OPERATION	REMARKS
STEP 1	TIME + PITCH	Enter into Preset mode	Press both buttons together
STEP 2	SKIPFWD or SKIPBACK	Select Preset Item	Item No. 00~08 (See below chart)
STEP 3	FFWD or FBACK	Change Preset Data	Select Data
STEP 4	CUE	Store New setting	This registers the Data
STEP 5	TIME + PITCH	Exit Preset mode	Press both buttons together

ITEM No. (Track No. area)	ITEMS (NO. 00 ~ 08)	PRESET DATA	
		(MIN./SEC area)	(MIN./SEC area)
01	Single or Continuous Play Mode when Power ON	0: Single (*)	1: Continue
02	Elapsed or Remaining Time display when Power ON	0: Elapsed (*)	1: Remain
03	Pitch % Display ON or OFF	0: Track (*)	1: Pitch
04	Pitch function ON or OFF when Power ON	0: Pitch OFF (*)	1: Pitch ON
05	Pitch control range ( $\pm 8\%$ or $\pm 4\%$ )	0: $\pm 8\%$ (*)	1: $\pm 4\%$
06	Disc Holder Auto Close ON or OFF	0: OFF (*)	1: ON
07	CUE Detect level (OFF, -72dB ~ -36dB)	---: Detect OFF	-54: -54 dB
		-72: -72 dB	-48: -48 dB
		-66: -66 dB	-42: -42 dB
		-60: -60 dB (*)	-36: -36 dB
08	E.O.M. (End Of Message) Duration (OFF, 0 sec. ~ 60 sec.)	0: EOM OFF (*)	20: 20 sec.
		10: 10 sec.	30: 30 sec.
		15: 15 sec.	60: 60 sec.

00	Reset to Initial Setting	0: Not Initialize	1: Initialize
----	--------------------------	-------------------	---------------

(\* mark: Initial setting upon shipment)

## Other Settings

BUTTONS	OPERATION	DISPLAY	REMARKS
TIME + [-] PITCH BEND	A) Single mode	"SINGLE"	Press both buttons together
TIME + [+] PITCH BEND	B) Continuous mode	"CONTINUE"	
TIME (for more than 2 sec.)	Display PITCH%	"PITCH%"	Keep pressing for more than 2 sec. Once keep pressing returns to Track display.