

XLS DriveCore™ 2 Series Operation Manual



XLS 1002

XLS 1502

XLS 2002

XLS 2502

Product Registration: Register your new product at <http://warranty.harmanpro.com>.

Obtaining Other Language Versions: To obtain information in another language about the use of this product, please contact your local HARMAN Professional Distributor. If you need assistance locating your local distributor, please visit www.crownaudio.com/where_to_buy.

This manual does not include all of the details of design, production, or variations of the equipment. Nor does it cover every possible situation which may arise during installation, operation or maintenance.

The information provided in this manual was deemed accurate as of the publication date. However, updates to this information may have occurred. To obtain the latest version of this manual, please visit the Crown website at www.crownaudio.com.

Trademark Notice: Crown, Crown Audio, and Amcron are registered trademarks of Crown International. Other trademarks are the property of their respective owners. Later versions of this manual and additional information about this product may be available at the Crown website at www.crownaudio.com.

Warranty & Product Registration: Register your new Crown amplifier at <http://warranty.harmanpro.com>

Some models may be exported under the name Amcron®

©2015 by HARMAN International, Inc., 1718 W. Mishawaka Rd., Elkhart, Indiana 46517-9439 U.S.A. Telephone: 574-294-8000.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Use the mains plug to disconnect the apparatus from the mains.
16. WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.



17. DO NOT EXPOSE THIS EQUIPMENT TO DRIPPING OR SPLASHING AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ARE PLACED ON THE EQUIPMENT.
18. THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY OPERABLE.



TO PREVENT ELECTRIC SHOCK DO NOT REMOVE TOP OR BOTTOM COVERS. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE. THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY OPERABLE.

WATCH FOR THESE SYMBOLS:



The lightning bolt triangle is used to alert the user to the risk of electric shock.



The exclamation point triangle is used to alert the user to important operating or maintenance instructions.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



IMPORTANT

XLS Series amplifiers require Class 2 output wiring.

MAGNETIC FIELD

CAUTION! Do not locate sensitive high-gain equipment such as preamplifiers or tape decks directly above or below the unit. Because this amplifier has a high power density, it has a strong magnetic field which can induce hum into unshielded devices that are located nearby. The field is strongest just above and below the unit.

If an equipment rack is used, we recommend locating the amplifier(s) in the bottom of the rack and the preamplifier or other sensitive equipment at the top.

FCC COMPLIANCE NOTICE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

DECLARATION OF CONFORMITY

Issued By: HARMAN International Inc.
1718 W. Mishawaka Rd.
Elkhart, IN 46517 U.S.A.

FOR COMPLIANCE QUESTIONS ONLY: Sue.Whitfield@harman.com

European Representative's Name and Address:

HARMAN International
Cranborne Road Potters Bar,
EN6 3JN United Kingdom

Equipment Type: Power amplifiers

Family Name: XLS DriveCore 2 Series

Model Names: XLS 1002, XLS 1502, XLS 2002, XLS 2502

EMC Standards:

EN 55103-1:2009 +A1:2012 Electromagnetic Compatibility – Product Family Standard for Audio, Video, Audio-Visual and Entertainment Lighting Control Apparatus for Professional Use, Part 1: Emissions

EN 55103-1:2009 +A1:2012 Magnetic Field Emissions-Annex A @ 10 cm and 1 M

EN 61000-3-2:2006 +A1:2008 +A2:2009 Limits for Harmonic Current Emissions (equipment input current ≤16A per phase)

EN 61000-3-3:2013 Limitation of Voltage Fluctuations and Flicker in Low-Voltage Supply Systems Rated Current ≤16A

EN 55022:2012 Limits and Methods of Measurement of Radio Disturbance Characteristics of ITE: Radiated, Class B Limits; Conducted, Class B

EN 55103-2:2009 Electromagnetic Compatibility – Product Family Standard for Audio, Video, Audio-Visual and Entertainment Lighting Control Apparatus for Professional Use, Part 2: Immunity

EN 61000-4-2:2009 Ed 9 Electrostatic Discharge Immunity (Environment E2-Criteria B, 4k V Contact, 8k V Air Discharge)

EN 61000-4-3:2010 Ed 3.2 Radiated, Radio-Frequency, Electromagnetic Immunity (Environment E2, Criteria A)

EN 61000-4-4:2012 Ed 12 Electrical Fast Transient/Burst Immunity (Criteria B)

EN 61000-4-5:2014 Surge Immunity (Criteria B)

EN 61000-4-6:2009 Immunity to Conducted Disturbances Induced by Radio-Frequency Fields (Criteria A)

EN 61000-4-11:2004 Voltage Dips, Short Interruptions and Voltage Variation

Safety Standard:

IEC 60065: 2002 +A12:2011, IEC 60065:2001 Ed 7 +A1:2010 Safety Requirements - Audio Video and Similar Electronic Apparatus

CAN/CSA 60065-03 incl. A1 Safety Requirements - Audio, Video, and Similar Electronic Apparatus

UL Std No. 60065-2007 Safety Requirements - Audio, Video, and Similar Electronic Apparatus

I certify that the product identified above conforms to the requirements of the EMC Council Directive 89/336/EEC as amended by 92/31/EEC, and the Low Voltage Directive 73/23/EES as amended by 93/68/EEC.

Signed



Jeff Denman

Title: Sr. Director of Operations

Date of Issue: April 1, 2015

Table of Contents

Important Safety Instructions	2
Declaration of Conformity	3
Table of Contents	4
Welcome	5
Front Panel Features	6
Back Panel Features	6
Get Started (Amplifier Modes)	7
Stereo Mode	
Bridge Mode	
Input-Y Mode	
Integrated Processing Features.....	8
System Configuration Examples	9
Monaural Bi-Amp	
Stereo Bi-Amp (using 2 amplifiers)	
Menu Navigation	10
Additional Features.....	11
Display Sleep	
Lighting	
Security	
System Information	
Reset Factory Defaults	
Specifications	12
Service	13
Warranty	15
Service Return Authorization Request	16

Welcome



Crown XLS DriveCore 2 Series amplifiers define the standard for portable PA systems with unmatched performance, technology and affordability that effortlessly deliver night after night. We packed XLS with enormous flexibility, thanks to a wide range of features ranging from Peak[™] Limiters to DSP functionality that allows Band Pass filters on each channel. The XLS weighs less than 11 lbs (5 kg), making it the most featured packed amplifier for the weight on the market.

Beyond the amazing technology and performance, we wanted to make these high performance amplifiers the best looking in any environment. The new XLS DriveCore 2 Series has a finely crafted aluminum bezel that now allows you to turn off lighting for a stealth look and remotely trigger sleep mode for remote applications through a contact closure.

Features


- High performance, lightweight Class-D amplifier powered by DriveCore Technology
- XLR, ¼", RCA inputs ensure compatibility with any source
- Expanded DSP with Band Pass filters
- User controllable lighting and a display sleep function
- Selectable 1.4Vrms or .775Vrms input sensitivity to drive any source to full power
- Remote power control through a contact closure
- Crown No-Fault Fully-Transferable 3-year Warranty completely protects your investment

How to Use This Manual


This manual provides you with the necessary information to safely and correctly setup and operate your amplifier. It does not cover every aspect of installation, setup or operation that might occur under every condition. For additional information, please contact technical support, your system installer or retailer.

We strongly recommend you read all instructions, warnings and cautions contained in this manual. Also for your protection, please save your bill of sale — it's your official proof of purchase.

Front Panel Features

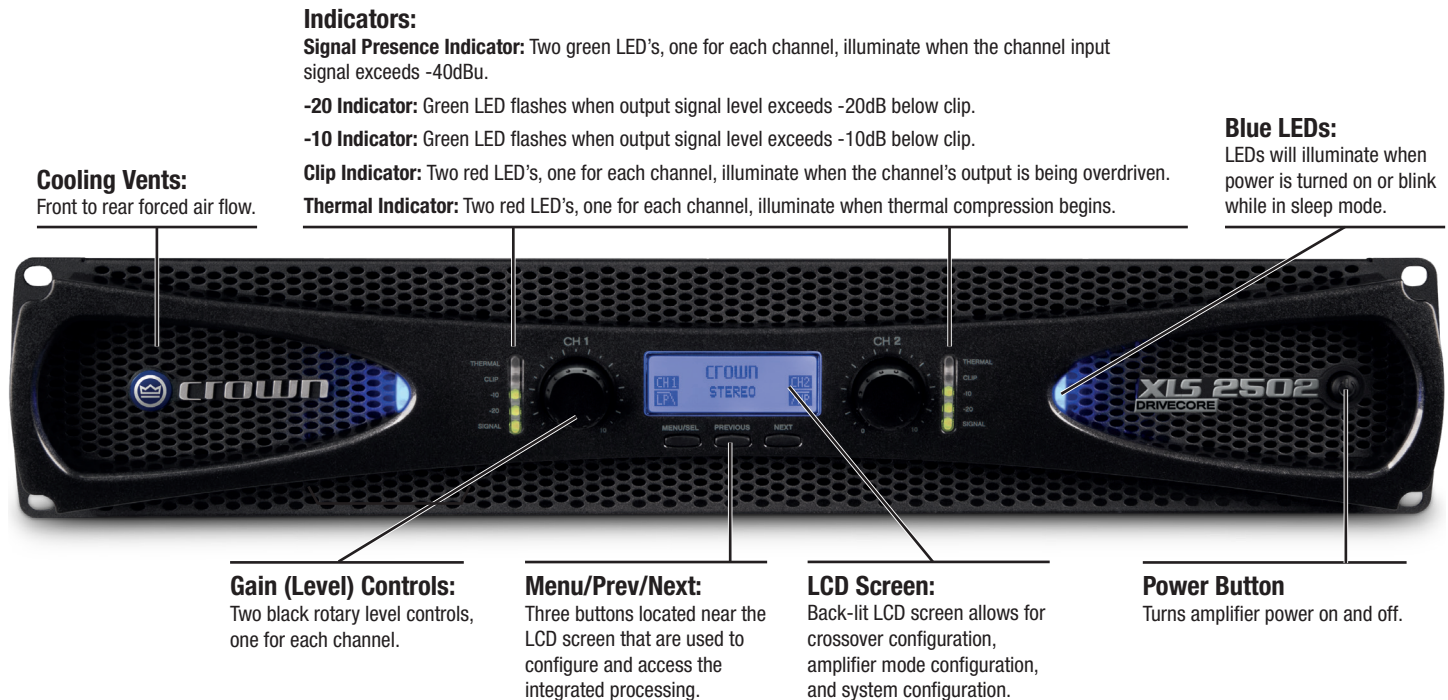

Back Panel Features

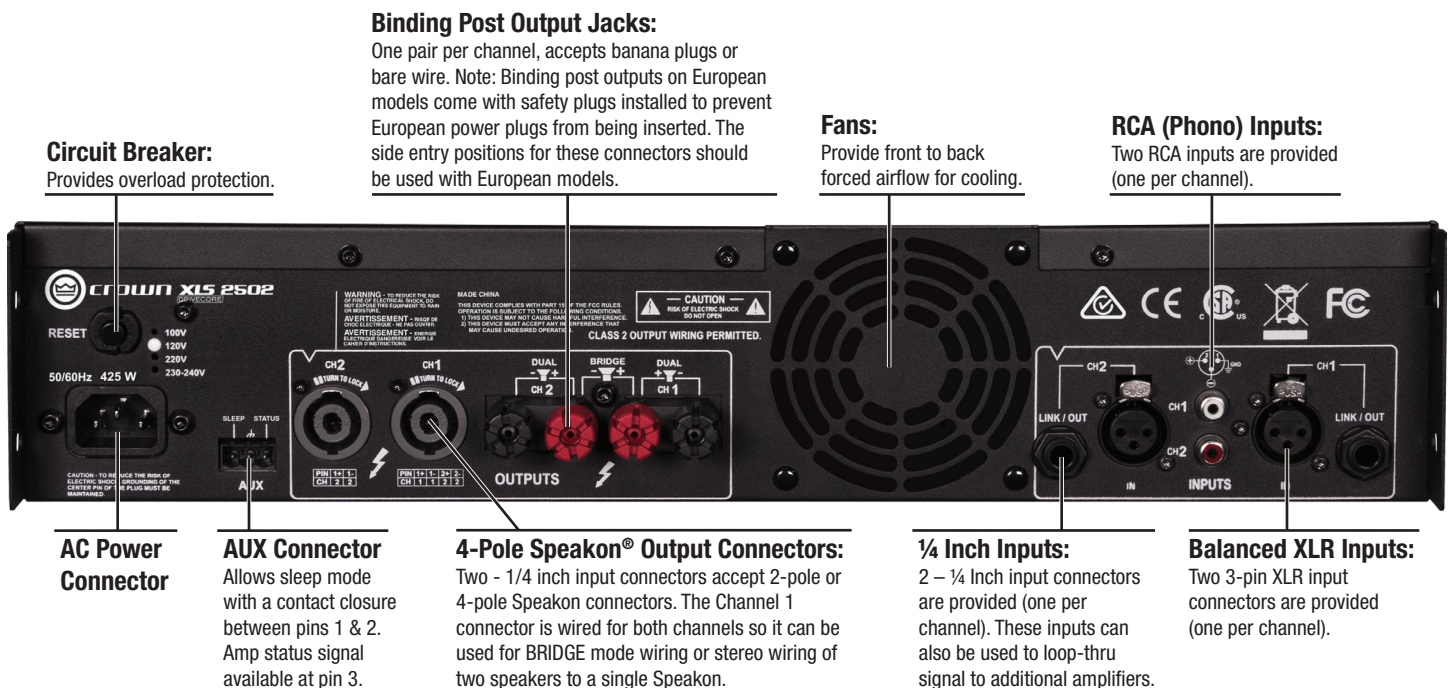

Get Started

Stereo Mode

This is the default mode the amplifier is set to from the factory. Filters are available in this mode and will be described in detail in the Crossover Filters section on page 9.

1. Connect Left/Right signal source to Channel 1 and Channel 2 using either the XLR, ¼ Inch, or RCA connectors.
2. Connect a speaker to each channel output using Speakon, Banana Plugs, or bare wire.



Bridge Mode

BRIDGE mode delivers the power of both amp channels into a single load of 4Ω or greater.

Before you get started ensure that you:

1. Connect signal source to Channel 1 only using either the XLR, ¼ Inch, or RCA connectors.
2. Connect the speaker as shown.
 - a. If using the binding post outputs, connect the positive terminal of the speaker to the positive terminal of Channel 1 and the negative terminal of the speaker to the positive terminal of Channel 2.
 - b. If using the Speakon output, connect the positive terminal of the speaker to Speakon pin 1+ and the negative terminal of the speaker to Speakon pin 2+, then plug the Speakon connector into Channel 1 output of the amplifier.



Follow these quick steps to configure the amplifier for BRIDGE mode:

1. Hold the MENU/SEL button for 1 second until the LCD screen displays the MAIN MENU.
2. Highlight AMP MODE and press the MENU/SEL button to enter the AMP MODE menu.
3. Press the NEXT button until BRIDGE is highlighted.
4. Press the MENU/SEL button to select BRIDGE mode.
5. Now the LCD screen displays the MAIN MENU. You may continue to the CROSSOVER menu status screen which will now show that the amplifier is in BRIDGE mode.

Get Started

Input-Y Mode

The INPUT-Y mode directs the input signal from Channel 1 to both amplifier output channels. This mode is often configured to use a Low Pass filter on Channel 1 and a High Pass filter on Channel 2 as a crossover to drive bi-amplified systems.

Before you get started ensure that you:

1. Connect signal source to Channel 1 only using either the XLR, ¼ Inch, or RCA connectors. Any source connected to Channel 2 will be ignored.
2. Connect a speaker to each channel output using Speakon®, Banana Plugs, or bare wire.

Follow these quick steps to configure the amplifier for INPUT-Y mode:

1. Hold the MENU/SEL button for 1 second until the LCD screen displays the MAIN MENU.
2. Highlight AMP MODE and press the MENU/SEL button to enter the AMP MODE menu.
3. Press the NEXT button until INPUT-Y is highlighted and press the MENU/SEL button to select INPUT-Y mode.
4. Now the LCD screen displays the MAIN MENU. You may continue to the CROSSOVER menu to set up filter options or scroll down to EXIT to return the status screen which will now show the amplifier is in INPUT-Y mode.



Integrated Processing Features

PureBand™ Crossover Filter System:

The PureBand Crossover System provides a variable state Linkwitz-Riley 24dB/octave filter allowing you to choose a point between 30Hz and 3kHz on standard 1/12th octave centers. Three filter types are available: Low Pass, High Pass and Band Pass.

For instructions on setting up the different crossover filter settings, please see the System Configuration Examples in the following section of this manual.

Peak_x™ Limiters

The Peak_x Limiters provide your amplifier and system with higher performance and better protection. They are specifically tuned to work with this amplifier design and power-supply to achieve higher SPL with less audible artifacts while protecting your loudspeaker investment.

System Configuration Examples

Monaural Bi-Amp System

1. Configure the system as described in Input-Y section on page 8. The woofer connected to Channel 1 and the mid/high drivers to Channel 2.
2. Set up Channel 1 as a Low Pass filter and use your crossover frequency as the filter's cutoff frequency.
3. Set up Channel 2 as a High Pass filter using the same filter cutoff frequency as in Step 2 above.



Stereo Bi-Amp System

A theater 2.1 sound amplification system can be easily set up using one amplifier in STEREO mode for the L and R channels and a second amplifier in BRIDGE mode with a Low Pass filter set to the appropriate cutoff frequency.



Menu Navigation

Main Menu

Enter the MAIN MENU by holding the MENU/SEL button beneath the display for about a second. From the MAIN MENU one may navigate, using the PREVIOUS and NEXT buttons, to one of four other menus or select EXIT to return to the status screen where only three lines of text are displayed. Use the up arrow or down arrow to highlight the menu you wish to go to and press the MENU/SEL button to make your selection.

MAIN MENU	AMP MODE CROSSOVER INPUT SENSITIVITY SYSTEM EXIT
------------------	--

Amp Mode

The AMP MODE menu is used to select one of three amplifier modes available in your XLS amplifier. The factory default is set to STEREO mode. In STEREO mode, Channel 1 and Channel 2 both function as independent amplifiers. BRIDGE sets the outputs into a bridge configuration as described in the BRIDGE mode section. The INPUT-Y mode allows the user to drive the two channels from the same input signal source. This is convenient for setting up crossover filters for bi-amplified systems.

AMP MODE	STEREO BRIDGE INPUT-Y BACK
-----------------	-------------------------------------

Crossover

The CROSSOVER menu will allow the selection of filter type and filter frequency for each amplifier output channel. If the amplifier is in STEREO or INPUT-Y mode, you will first be prompted to select which amplifier channel to set up (BRIDGE mode skips this step). When you enter the CROSSOVER menu, the amplifier mode will be displayed.

CROSSOVER	CHANNEL 1
STEREO	CHANNEL 2
	BACK

Bridge Mode

Once you have selected the channel or if you are in BRIDGE mode, the available filter types will be displayed. Scroll to select between LOW PASS, BAND PASS or HIGH PASS filters, or select NO CROSSOVER. If a filter has been selected, the next screen will display the filter type and cut-off frequency. In the case of the BAND PASS filter, both the low and high cut-off frequencies will be displayed. Once you have selected the cut-off frequency or frequencies, you will be taken back to the MAIN MENU.

CROSSOVER	NO CROSSOVER
CHANNEL 1	LOW PASS
	BAND PASS
	HIGH PASS
	BACK

Input Sensitivity

The INPUT SENSITIVITY feature enables the playback from sources with inherently low output levels to drive the amplifier to full power by selecting ".775 - HIGH." It is recommended that this remain set at the default NORMAL setting for all other audio sources to provide optimal system performance. The HIGH setting is often used with source devices that use RCA connections.

INPUT	1.4V - NORMAL
SENSITIVITY	.775V - HIGH

Additional Features

System Menu

The following features may be accessed through the SYSTEM MENU. The SYSTEM MENU is the fourth selection on the MAIN MENU. Since only three selections are displayed, you must scroll down using the NEXT button until SYSTEM is displayed and highlighted.

SYSTEM MENU	DISPLAY SLEEP LIGHTING SECURITY INFORMATION FACTORY RESET BACK
--------------------	---

Display Sleep

The user may configure the amplifier to allow the display to go into a sleep mode after a pre-determined idle time. This feature can be useful in applications where it is desirable to minimize the light from the amplifier.

This feature may be accessed via SYSTEM > DISPLAY SLEEP. Within the DISPLAY SLEEP menu, the user has the option to set the sleep mode to off or to choose a delay time of 30 seconds, 1 minute, 2 minutes or 5 minutes. If no menu buttons are pushed and the time period elapses, the display will turn off. It can be awakened by touching any menu button.

LED Lighting Options

LED lighting Options can be accessed via SYSTEM > LIGHTING. Inside the LIGHTING menu, the user can toggle the on and off of blue panel lights as well as the green signal level indicators.

Note: The thermal and clip indicators cannot be disabled.

Security

A security feature allows the user to lock the menu buttons so that the settings are not disturbed once they have been set up. To enable the security feature, go to SYSTEM > SECURITY and press NEXT to toggle the display to ENABLE. Press MENU/SEL to return to the SYSTEM MENU. Once enabled, the user can lock-out the menu buttons by simultaneously pressing the PREVIOUS and NEXT buttons. The menu will remain locked, even through a power cycle, until the PREVIOUS and NEXT buttons are pressed again.

System Information

For the audio geeks that just can't get enough data, we have provided a window to access your amplifier's system information. SYSTEM > INFORMATION will reveal a list of information including the model number, internal temperatures and voltages, firmware release number, etc.

Reset Factory Defaults

There may come a time when you just want to reset the entire system and start your setup from ground zero. If you are sure that you want to do this, you may select FACTORY RESET from the SYSTEM MENU. If you select YES for factory reset, you will then be prompted to confirm your choice.

WARNING: If you reset your amplifier, all settings will revert to the factory preset values and you will lose all configurations you may have entered for amplifier modes, filter frequencies, input sensitivity and system settings.

Specifications

Performance Specifications

	1002	1502	2002	2502
Sensitivity	.775Vrms or 1.4Vrms	.775Vrms or 1.4Vrms	.775Vrms or 1.4Vrms	.775Vrms or 1.4Vrms
Frequency Response (1W, 20Hz - 20kHz)	+0dB, -1dB	+0dB, -1dB	+0dB, -1dB	+0dB, -1dB
Signal to Noise Ratio (rated dBr to full rated 8Ω power output; A-Weighted)	>97dB*	>103dB*	>103dB*	>103dB*
Total Harmonic Distortion (THD)	<0.5%	<0.5%	<0.5%	<0.5%
Intermodulation Distortion (60Hz and 7 kHz at 4:1) from full rated output to -30dB	<0.3%	<0.3%	<0.3%	<0.3%
Damping Factor (8Ω, 10Hz ~ 400Hz)	>200	>200	>200	>200
Crosstalk (below rated 8Ω power)	At 1kHz: > 85dB At 20kHz: > 55dB	At 1kHz: > 85dB At 20kHz: > 55dB	At 1kHz: > 85dB At 20kHz: > 55dB	At 1kHz: > 85dB At 20kHz: > 55dB

*when operated at 1.4Vrms sensitivity

Physical Specifications

	1002	1502	2002	2502
Width	19 in. (48.3 cm)	19 in. (48.3 cm)	19 in. (48.3 cm)	19 in. (48.3 cm)
Height	3.5 in. (8.9 cm)	3.5 in. (8.9 cm)	3.5 in. (8.9 cm)	3.5 in. (8.9 cm)
Depth	7.7 in. (19.6 cm)	7.7 in. (19.6 cm)	10.7 in. (27.2 cm)	10.7 in. (27.2 cm)
Net Weight	8.6 lbs (3.9 kg)	8.6 lbs (3.9 kg)	10.8 lbs (4.9 kg)	10.8 lbs (4.9 kg)
Shipping Weight	13.6 lbs (6.2 kg)	13.6 lbs (6.2 kg)	15.8 lbs (7.2 kg)	15.8 lbs (7.2 kg)

Power Matrix

	1002	1502	2002	2502
Channels	2	2	2	2
2Ω Dual	550W	775W	1050W	1200W
4Ω Dual	350W	525W	650W	775W
8Ω Dual	215W	300W	375W	440W
4Ω Bridged	1100W	1550W	2100W	2400W
8Ω Bridged	700W	1050W	1300W	1550W

Service

Crown products are quality units that rarely require servicing. Before returning your unit for servicing, please contact Crown Technical Support to verify the need for servicing.

Warranty is only valid within the country in which the product was purchased.

This unit has very sophisticated circuitry which should only be serviced by a fully trained technician. This is one reason why each unit bears the following label:



CAUTION: To prevent electric shock, do not remove covers. No user serviceable parts inside. Refer servicing to a qualified technician.

Complete the Service Return Authorization form in the back of this manual, when returning a Crown product to the factory or authorized service center. The form must be included with your product inside the box or in a packing slip envelope securely attached to the outside of the shipping carton. Do not send this form separately.

Worldwide Service

Service may be obtained from an authorized service center (contact your local Crown/Amcron representative or our office for a list of authorized service centers). To obtain service, simply present the bill of sale as proof of purchase along with the defective unit to an authorized service center. They will handle the necessary paperwork and repair.

Remember to transport your unit in the original factory pack.

US and Canada Service

Service may be obtained in one of two ways: from an authorized service center or from the factory. You may choose either. It is important that you have your copy of the bill of sale as your proof of purchase.

Service at a US or Canada Service Center

This method usually saves the most time and effort. Simply present your bill of sale along with the defective unit to an authorized service center to obtain service. They will handle the necessary paperwork and repair. Remember to transport the unit in the original factory pack. A list of authorized service centers in your area can be obtained online at http://www.crownaudio.com/en/support/service_lookup

Factory Service

Crown accepts no responsibility for non-serviceable product that is sent to us for factory repair. It is the owner's responsibility to ensure that their product is serviceable prior to sending it to the factory.

A Service Return Authorization (SRA) is required for product being sent to the factory for repair. An SRA can be completed online at <http://www.crownaudio.com/support/rma>. If you do not have access to the web, please call Customer Service at 574.294.8200 or 800.342.6939 extension 8205 in North America, Puerto Rico and the Virgin Islands only.

For warranty service, we will pay for ground shipping both ways in the United States. Contact Customer Service to obtain prepaid shipping labels prior to sending the unit. Or, if you prefer, you may prepay the cost of shipping, and HARMAN will reimburse you. Send copies of the shipping receipts to HARMAN to receive reimbursement.

Your repaired unit will be returned via UPS ground. Please contact us if other arrangements are required.

Factory Service Shipping Instructions:

1. Service Return Authorization (SRA) is required for product being sent to the factory for service. Please complete the SRA by going to <http://www.crownaudio.com/support/rma>. If you do not have access to our website, call 1.800.342.6939, extension 8205 and we will create the SRA for you.
2. See packing instructions that follow.
3. Ship product to:
HARMAN Factory Service
1718 W Mishawaka Rd.
Elkhart, IN 46517

Service

4. Use a bold black marker and write the SRA number on three sides of the box.
5. Record the SRA number for future reference. The SRA number can be used to check the repair status.

Packing Instructions

Important: These instructions must be followed. If they are not followed, HARMAN International, Inc. assumes no responsibility for damaged goods and/or accessories that are sent with your unit.

1. Fill out and include the Service Return Authorization Request in the back of this manual.
2. Do not ship any accessories (manuals, cords, hardware, etc.) with your unit. These items are not needed to service your product. We will not be responsible for these items.
3. When shipping your Crown product, it is important that it has adequate protection. We recommend you use the original pack material when returning the product for repair. If you do not have the original box, please call HARMAN at 800.342.6939 or 574.294.8210 and order new pack material. (Do not ship your unit in a wood or metal cabinet).
4. If you provide your own shipping pack, the minimum recommended requirements for materials are as follows:
 - a. 275 P.S.I. burst test, double-wall carton that allows for 2-inch solid Styrofoam on all six sides of unit or 3 inches of plastic bubble wrap on all six sides of unit.
 - b. Securely seal the package with an adequate carton sealing tape.
 - c. Do not use light boxes or "peanuts". Damage caused by poor packaging will not be covered under warranty.

Enclose the completed Service Return Authorization Request (or securely attach it to the outside of carton) and re-seal the shipping pack with a sturdy carton sealing tape.

Estimate Approval

Approval of estimate must be given within 30 days after being notified by HARMAN International. Units still in the possession of HARMAN after 30 days of the estimate will become the property of HARMAN International.

Payment of Non-Warranty Repairs

Payment on out-of-warranty repairs must be received within 30 days of the repair date. Units unclaimed after 30 days become the property of HARMAN International.

If you have any questions, please contact HARMAN.

HARMAN Factory Service

1718 W. Mishawaka Rd.,
Elkhart, Indiana 46517 U.S.A.

Telephone:

574-294-8200
800-342-6939 (North America, Puerto Rico, and Virgin Islands only)

Facsimile:

574-294-8301 (Technical Support)
574-294-8124 (Factory Service)

Web site:

www.crownaudio.com

Warranty — UNITED STATES ONLY



SUMMARY OF WARRANTY

Crown International, 1718 West Mishawaka Road, Elkhart, Indiana 46517-4095 U.S.A. warrants to you, the ORIGINAL PURCHASER and ANY SUBSEQUENT OWNER of each NEW Crown product, for a period of three (3) years from the date of purchase by the original purchaser (the "warranty period") that the new Crown product is free of defects in materials and workmanship. We further warrant the new Crown product regardless of the reason for failure, except as excluded in this Warranty.

**Warranty is only valid within the United States of America. For information on Warranty outside of the U.S.A, please contact your local distributor.*

ITEMS EXCLUDED FROM THIS CROWN WARRANTY

This Crown Warranty is in effect only for failure of a new Crown product which occurred within the Warranty Period. It does not cover any product which has been damaged because of any intentional misuse, accident, negligence, or loss which is covered under any of your insurance contracts. This Crown Warranty also does not extend to the new Crown product if the serial number has been defaced, altered, or removed.

WHAT THE WARRANTOR WILL DO

We will remedy any defect, regardless of the reason for failure (except as excluded), by repair, replacement, or refund. We may not elect refund unless you agree, or unless we are unable to provide replacement, and repair is not practical or cannot be timely made. If a refund is elected, then you must make the defective or malfunctioning product available to us free and clear of all liens or other encumbrances. The refund will be equal to the actual purchase price, not including interest, insurance, closing costs, and other finance charges less a reasonable depreciation on the product from the date of original purchase. Warranty work can only be performed at our authorized service centers or at the factory. We will remedy the defect and ship the product from the service center or our factory within a reasonable time after receipt of the defective product at our authorized service center or our factory. All expenses in remedying the defect, including surface shipping costs in the United States, will be borne by us. (You must bear the expense of shipping the product between any foreign country and the port of entry in the United States including the return shipment, and all taxes, duties, and other customs fees for such foreign shipments.)

HOW TO OBTAIN WARRANTY SERVICE

You must notify us of your need for warranty service within the warranty period. All components must be shipped in a factory pack, which, if needed, may be obtained from us free of charge. Corrective action will be taken within a reasonable time of the date of receipt of the defective product by us or our authorized service center. If the repairs made by us or our authorized service center are not satisfactory, notify us or our authorized service center immediately.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES

YOU ARE NOT ENTITLED TO RECOVER FROM US ANY INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN THE NEW CROWN PRODUCT. THIS INCLUDES ANY DAMAGE TO ANOTHER PRODUCT OR PRODUCTS RESULTING FROM SUCH A DEFECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

WARRANTY ALTERATIONS

No person has the authority to enlarge, amend, or modify this Crown Warranty. This Crown Warranty is not extended by the length of time which you are deprived of the use of the new Crown product. Repairs and replacement parts provided under the terms of this Crown Warranty shall carry only the unexpired portion of this Crown Warranty.

DESIGN CHANGES

We reserve the right to change the design of any product from time to time without notice and with no obligation to make corresponding changes in products previously manufactured.

LEGAL REMEDIES OF PURCHASER

THIS CROWN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. No action to enforce this Crown Warranty shall be commenced after expiration of the warranty period.

THIS STATEMENT OF WARRANTY SUPERSEDES ANY OTHERS CONTAINED IN THIS MANUAL FOR CROWN PRODUCTS.
12/09

Service Return Authorization Request

Shipping Address: HARMAN Factory Service, 1718 W. Mishawaka Rd., Elkhart, IN 46517

You may also request a service return authorization at www.crownaudio.com/support/rma

PLEASE PRINT CLEARLY

SRA #: _____ (If sending product to Crown factory service)

Model: _____ Serial Number: _____ Purchase Date: _____

PRODUCT RETURN INFORMATION

Individual or Business Name: _____

Phone #: _____ Fax #: _____ E-Mail: _____

Street Address (please, no P.O. Boxes): _____

City: _____ State/Prov: _____ Postal Code: _____ Country: _____

Nature of problem: _____

Other equipment in your system: _____

If warranty is expired, please provide method of payment. Proof of purchase may be required to validate warranty.

PAYMENT OPTIONS

☐ I have open account payment terms. Purchase order required. PO#: _____ ☐ COD

☐ Credit Card (Information below is required; however if you do not want to provide this information at this time, we will contact you when your unit is repaired for the information.)

Credit card information:

Type of credit card: ☐ MasterCard ☐ Visa ☐ American Express ☐ Discover

Type of credit card account: ☐ Personal/Consumer ☐ Business/Corporate

Card # _____ Exp. date: _____ *Card ID #: _____

*Card ID # is located on the back of the card following the credit card #, in the signature area. On American Express, it may be located on the front of the card. This number is required to process the charge to your account. If you do not want to provide it at this time, we will call you to obtain this number when the repair of your unit is complete.

Name on credit card: _____

Billing address of credit card: _____

